

## Valve not Opening / Closing

### Check

### Method

- |   |  |   |  |
|---|--|---|--|
| 1 | Is there power to the solenoid ?   | → | Use a voltage meter.   |
| 2 | Is the solenoid coil the correct voltage?<br>(Voltage should be 110V in North America) | → | Examine the description on the coil  |
| 3 | Check valve operation  | → | Disassemble Solenoid Valve<br>Clean Rubber Membrane<br>Make sure that pressure equalization holes are clear<br>Clean Plunger and make sure it moves freely<br>Reassemble Solenoid Valve and Test |
| 4 | Watermeter still not operating   | → | CALL KISCO 604-823-7459  |