



KISCO MANUFACTURING

C O R P O R A T I O N

5155 ARGYLE ST, PORT ALBERNI, BC CANADA

Phone (604)823-7456

Replacing front cover & Sacrificial Hub Models B-E

DISCONNECT UNIT POWER AND TURN OFF WATER BEFORE BEGINNING

- 1- Remove plug from knob using a small screw driver
- 2- Undo screw in center of knob using allen key
- 3- Gently wiggle knob until it comes off
- 4- Remove 6 plugs from front plate
- 5- Using a Phillips screwdriver undo all 6 screws
- 6- Now lift front cover slowly. There are two green plugs attaching the front plate to the main body. Pull firmly on the green plug. DO NOT pull on wires
- 7- Turn Black knob counter clock wise until it comes off.
- 8- Using a screwdriver pry off the plastic ring
- 9- Attach NEW plastic ring by firmly pressing down, it will snap in place
- 10- Screw on new black knob
- 11- Re-attach front cover by plugging in green plugs firmly
- 12- Place front cover back on
- 13- Fasten screws
- 14- Turn water on
- 15- Plug in unit
- 16- Place knob on black hub.
- 17- While running water through unit turn knob until the screen shows a water temperature between 30 and 35 degrees Celcius and is constant.
- 18- Stop running water
- 19- Remove knob and reposition so that the correct number is at the indicator arrow that corresponds with the digital read out.
- 20- Tighten center screw
- 21- Replace all grey plastic plugs
- 22- TEST

